## FJ CRUISER

# **MY-2007 STAINLESS STEEL EXHAUST TIP**

Preparation

Part Number: PTS18-60060

## **Kit Contents**

Item#	Quantity Reqd.	Description
1	1	Stainless Steel Exhaust Tip
2	1	Aluminum Bushing
3	1	Stainless Steel Clamp
4	1	Zinc Plated Lock Nut
5	1	Installation Instructions

**Hardware Bag Contents** 

Item#	Quantity Reqd.	Description
None		

**Additional Items Required For Installation** 

Item#	Quantity Reqd.	Description
None		

## **Conflicts**

#### **Recommended Tools**

Personal & Vehicle Protection	Notes
None	
<b>Special Tools</b>	Notes
None	
<b>Installation Tools</b>	
Ratchet	
Socket	14 mm Deep Well Socket
Torque Wrench	10 lbf-ft
Rubber Mallet	
Non-scratch Cloth	
Wiping Cloth	
<b>Special Chemicals</b>	
Glass Cleaner	Dealer Installed
Approved Cleaner	VDC Installed

## **General Applicability**

**Recommended Sequence of Application** 

Item #	Accessory
1	Exhaust Tip

\*Mandatory

**NOTE:** Part number of this accessory may not be the same as the part number shown.

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

# Legend



**STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.



**OPERATOR SAFETY:** Use caution to avoid risk of injury.



<u>CAUTION:</u> A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.


Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.


These guidelines can be found in the "Accessory Installation Practices" document.


This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

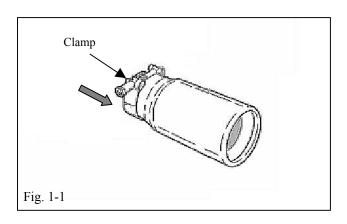

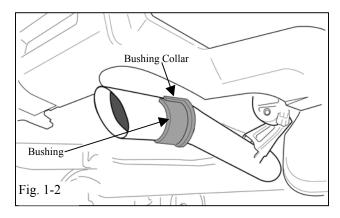

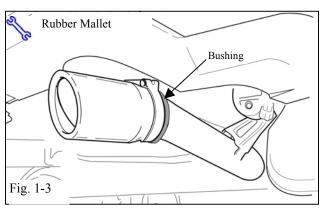

#### 1. Installation.

- (a) Make sure the vehicle's tail pipe is free from dirt and debris.
- (b) Remove exhaust tip from box and set on a soft surface to prevent scratching.
- (c) Slide the Stainless Steel clamp over the stainless steel exhaust tip inlet as shown. (Fig 1-1)




(1) Locate the bolt of the clamp at the top of the exhaust tip inlet with the bolt facing toward the left (driver side) side of the vehicle. (Fig. 1-1)



(d) Place bushing on tailpipe as shown. (Fig. 1-2)


- (e) Slide exhaust tip assembly onto the tailpipe & bushing and align over the bushing collar as shown. (Fig. 1-3)
  - (1) If necessary, a rubber mallet may be used to aid installation


**NOTE**: The bushing is designed to assure a tight fit between the exhaust tip and tailpipe. It is also designed to prevent the clamp from sliding off the exhaust tip.

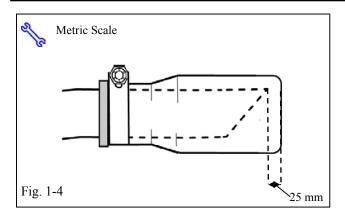



(2) Adjust the exhaust tip so there is approximately a 25 mm gap between the top of the tailpipe and the outside edge of the exhaust tip as shown. (Fig. 1-4)

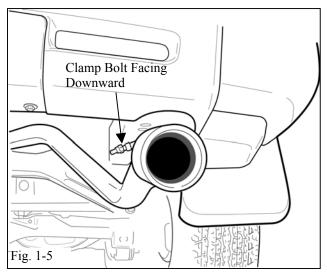

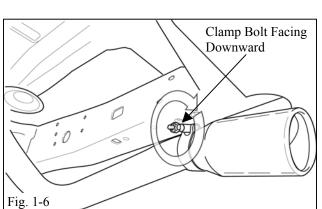



- (3) To prevent interference with the frame adjust the clamp bolt so that is not horizontal and is slightly facing downward as shown. (Fig. 1-5 & 1-6)
- (f) Once the tip, clamp & bushing are all positioned correctly and the alignment seems accurate, tighten the clamp nut as shown. (Fig. 1-6)
- (g) Torque clamp nut to 10 lbf-ft (8 lbf-ft min/12 lbf-ft max)
  - (h) Clean exhaust tip with glass cleaner or approved cleaner and non-scratching cloth

# TOYOTA FJ Cruiser MY-2006 STAINLESS STEEL EXHAUST TIP

Checklist - these points MUST be checked to ensure a quality installation. Check: Look For: **Accessory Function Checks** Verify part number on package. Correct part number has been installed. Nut Torque Nut Torque should be 10 lbf-ft (8 lbf-ft min/12 lbf-ft max). Tip Alignment 25 mm gap between the top of the tailpipe and the outside edge of the exhaust tip. Vehicle Function Checks Start engine and check for rattle or Rattle or vibration vibration of exhaust tip

Issue: A 6/13/06