
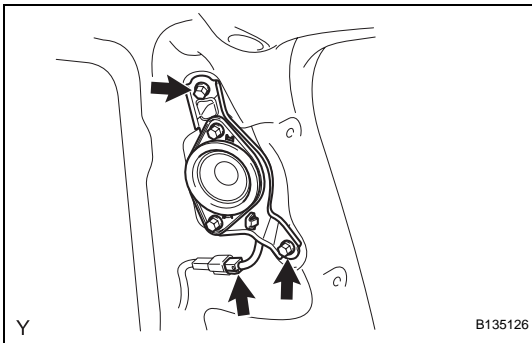


INSTALLATION

HINT:

The procedure described below is for the RH side. Use the same procedure for both the RH and LH sides, unless otherwise specified.

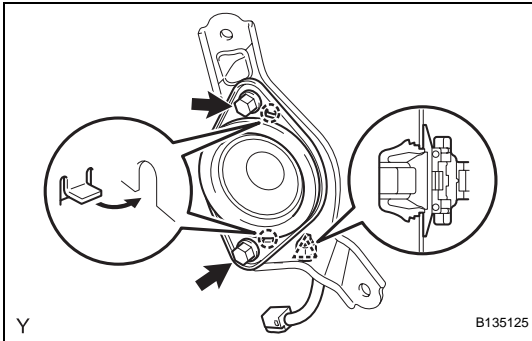

1. INSTALL REAR SPEAKER ASSEMBLY

- (a) Inert the 2 hooks into the 2 cutouts of the speaker mounting bracket and install the rear speaker with the 2 bolts.

Torque: 8.1 N*m (85 kgf*cm, 72 in.*lbf)

- (b) Install the clamp.

2. INSTALL SPEAKER MOUNTING BRACKET

- (a) Install the speaker mounting bracket with the 2 bolts.

Torque: 8.1 N*m (85 kgf*cm, 72 in.*lbf)

- (b) Connect the speaker connector.

3. INSTALL ROOF SIDE INNER GARNISH (See page [IR-38](#))

4. INSTALL DECK TRIM SIDE PANEL ASSEMBLY

- (a) for RH Side:

- (1) Install the deck trim side panel assembly (See page [IR-39](#)).

- (b) for LH Side:

- (1) Install the deck trim side panel assembly (See page [IR-39](#)).

5. INSTALL REAR DECK TRIM COVER (w/ Power Outlet Socket) (See page [IR-40](#))

6. INSTALL REAR SEAT OUTER BELT ASSEMBLY (See page [IR-40](#))

7. INSTALL LAP BELT OUTER ANCHOR COVER (See page [SB-61](#))

8. INSTALL AMPLIFIER BOX SPEAKER ASSEMBLY (w/ Woofer) (See page [AV-90](#))

9. INSTALL SPEAKER MOUNTING COVER (w/ Woofer) (See page [AV-91](#))

10. INSTALL DECK SIDE GARNISH (w/ Woofer) (See page [IR-41](#))

11. INSTALL QUARTER TRIM POCKET (w/o Woofer) (See page [IR-41](#))

12. INSTALL SIDE TRIM COVER (w/o Woofer) (See page [IR-42](#))

13. INSTALL QUARTER TRIM POCKET TRAY (w/o Woofer) (See page [IR-41](#))

14. **INSTALL PACKAGE HOLDER NET HOOK (w/o Woofer) (See page [SB-62](#))**
15. **INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP (See page [SB-62](#))**
16. **INSTALL ACCESS DOOR SCUFF PLATE (See page [IR-45](#))**
17. **INSTALL FRONT DOOR SCUFF PLATE (See page [IR-45](#))**
18. **INSTALL REAR FLOOR MAT ASSEMBLY (See page [IR-46](#))**
19. **INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY (See page [IR-46](#))**
20. **INSTALL REAR FLOOR MAT SUPPORT PLATE (See page [IR-46](#))**
21. **INSTALL REAR FLOOR BOARD (See page [IR-47](#))**
22. **INSTALL REAR SEATBACK ASSEMBLY**
 - (a) for RH Side:
 - (1) Install the rear seatback assembly (See page [SE-54](#)).
 - (b) for LH Side:
 - (1) Install the rear seatback assembly (See page [SE-38](#)).
23. **INSTALL REAR SEATBACK BOARD CARPET ASSEMBLY**
 - (a) for RH Side:
 - (1) Install the rear seatback board carpet assembly (See page [SE-54](#)).
 - (b) for LH Side:
 - (1) Install the rear seatback board carpet assembly (See page [SE-38](#)).
24. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)