


## Woofer Speaker Power Source Circuit

### DESCRIPTION

This circuit provides power to the woofer speaker.

### WIRING DIAGRAM

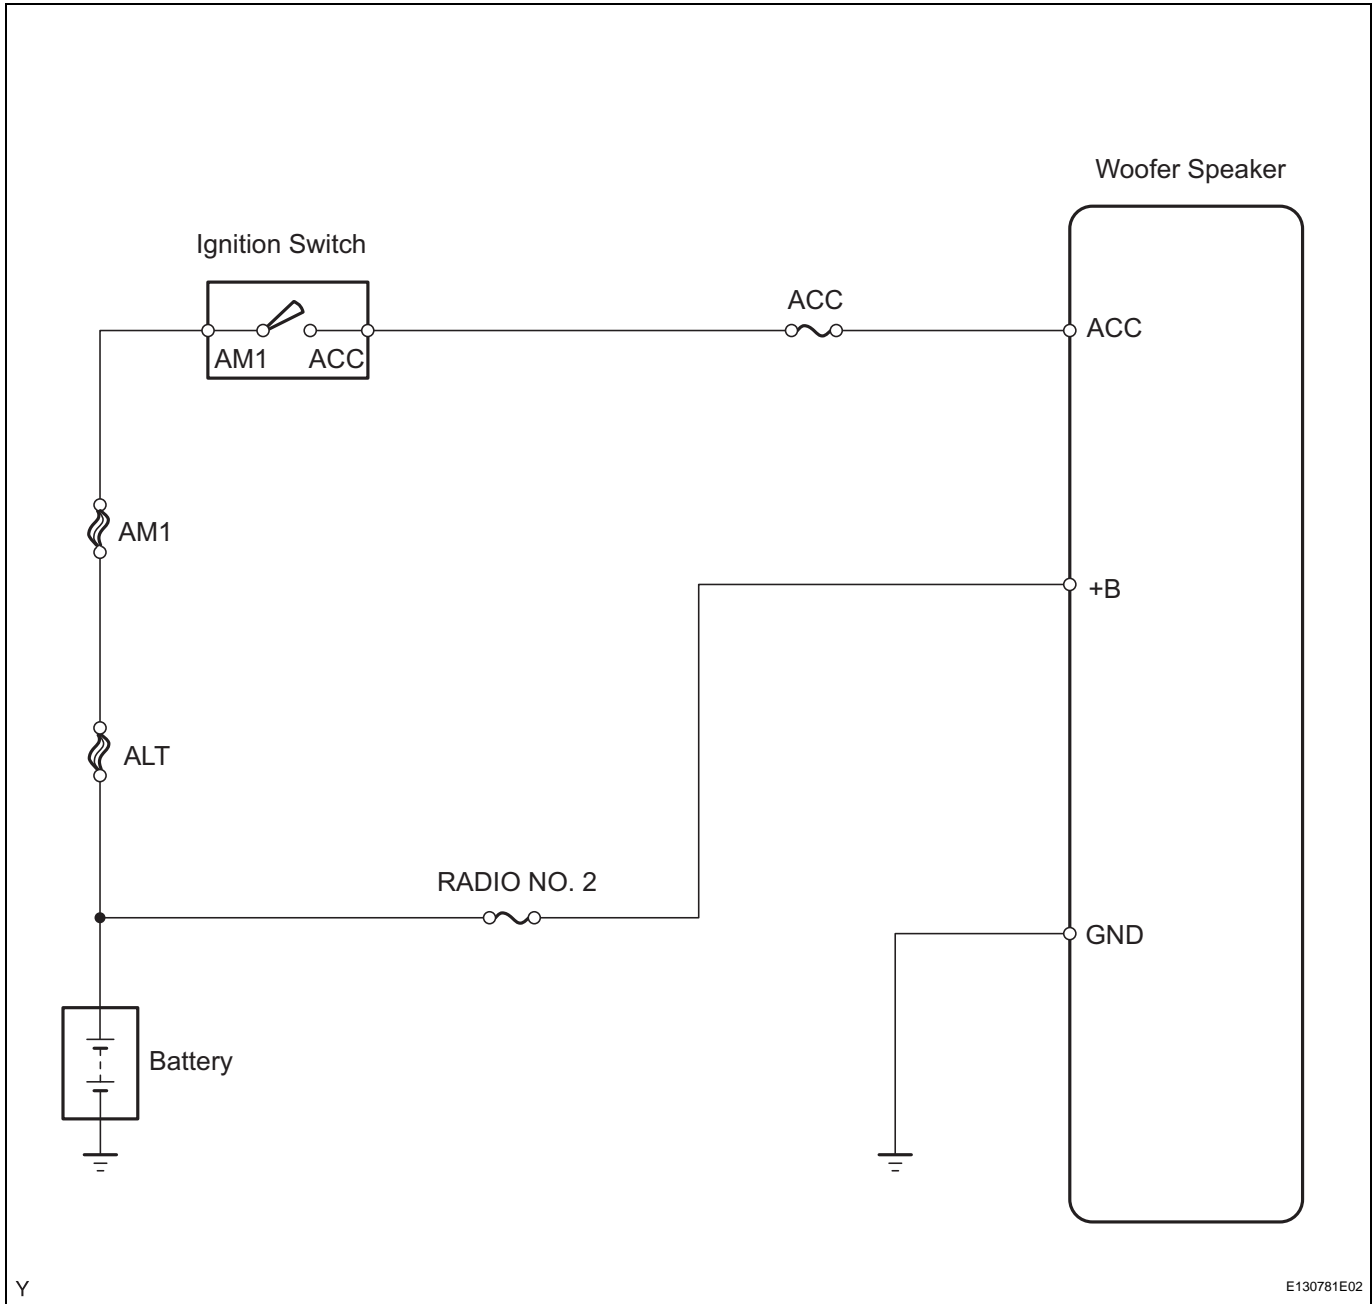

### INSPECTION PROCEDURE

<b>1</b>	<b>INSPECT FUSE (ACC, AM1, RADIO NO. 2)</b>
----------	---

- (a) Remove the ACC fuse from the main body ECU.
- (b) Remove the AM1 fuse and RADIO NO. 2 fuse from the engine room R/B.

(c) Measure the resistance of the fuses.

**Standard resistance:**


**Below 1 Ω**

(d) Reinstall the fuses.

**NG** **REPLACE FUSE**

**OK**

**2 CHECK HARNESS AND CONNECTOR (WOOFER SPEAKER - BATTERY AND BODY GROUND)**

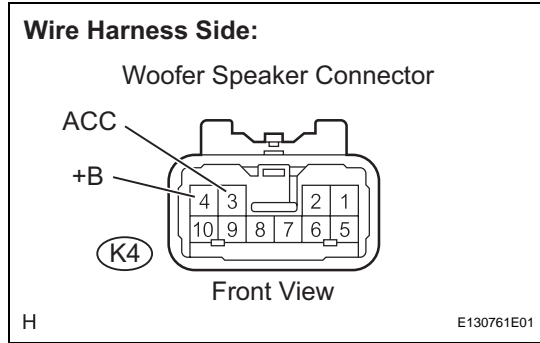

(a) Disconnect the K4 woofer speaker connector.

(b) Measure the voltage.

**Standard voltage**

Tester Connection	Condition	Specified Condition
K4-4 (+B) - Body ground	Always	11 to 14 V
K4-3 (ACC) - Body ground	Ignition switch ACC	11 to 14 V

(c) Measure the resistance.

**Standard resistance**

Tester Connection	Specified Condition
K4-7 (GND) - Body ground	Below 1 Ω

(d) Reconnect the woofer speaker connector.

**NG** **REPAIR OR REPLACE HARNESS OR CONNECTOR**

**OK**

**AV**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE**